

Library Description



MBUS_649_01.lib **WAGO M-Bus Library**

Version 1.0.0

© 2017 by WAGO Kontakttechnik GmbH & Co. KG
All rights reserved.

WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27
D-32423 Minden

Phone: +49 (0) 571/8 87 – 0
Fax: +49 (0) 571/8 87 – 1 69

Email: info@wago.com

Online: <http://www.wago.com>

Technical Support

Phone: +49 (0) 571/8 87 – 5 55
Fax: +49 (0) 571/8 87 – 85 55

Email: support@wago.com

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

We wish to point out that the software and hardware terms, as well as the trademarks of companies used and/or mentioned in the present document are generally protected by trademark or patent.

Information about This Documentation

Copyright

This documentation, including all figures and illustrations contained therein, is subject to copyright protection. Any use of this documentation that infringes upon the copyright provisions stipulated herein is prohibited. Reproduction, translation, electronic and photo-technical filing/archiving (e.g., photocopying), as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will entail the right of claims for damages.

Number Notation

Table 1: Number Notation

Number System	Example	Comment
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100' '0110.0100'	In quotation marks, nibble separated by a period

Font Conventions

Table 2: Font Conventions

Font Type	Explanation
<i>italic</i>	Names of paths and files are displayed in italics, e.g.: <i>C:\Programs\WAGO-I/O-CHECK</i>
Menu	Menu options are displayed in bold, e.g.: Save
>	A “greater than” symbol between two names denotes the selection of a menu option, e.g.: File > New
Input	Designation of input or optional fields are displayed in bold, e.g.: Start of measurement range
“Value”	Input or selection values are displayed in quotation marks, e.g.: Enter the value “4 mA” under Start of measurement range .
[Button]	Button labels within the dialogs are bold and enclosed in square brackets, e.g.: [Input]
[Keys]	Key labels on the keyboard are displayed in bold and enclosed in square brackets, e.g.: [F5]

Symbols

DANGER	Warning against personal injury!
	Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.
DANGER	Do not work on components while energized!
	Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.
WARNING	Warning against personal injury!
	Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.
CAUTION	Warning against personal injury!
	Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
NOTICE	Warning: Damage to property!
	Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.
ESD (Electrostatic Discharge)	Warning: Damage to property caused by electrostatic discharge (ESD)!
	Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.
Note	Important note!
	Indicates a potential malfunction which will not result in damage to property, however, if not avoided.
Information	Additional Information
	Refers to additional information which is not an integral part of this documentation (e.g., the Internet).

Legal Principles Subject to Change

WAGO Kontakttechnik GmbH & Co. KG reserves the right to make any alterations or modifications that serve to increase the efficiency of technical progress. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from granting patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

Personnel Qualification

The use of the product described in this document is exclusively geared to specialists having qualifications in PLC programming, electrical specialists or persons instructed by electrical specialists who are also familiar with the appropriate current standards.

Moreover, the persons cited here must also be familiar with all of the products cited in this document, along with the operating instructions. They must also be capable of correctly predicting any hazards which may not arise until the products are combined.

WAGO Kontakttechnik GmbH & Co. KG assumes no liability resulting from improper action and damage to WAGO products and third-party products due to non-observance of the information contained in this document.

Limitation of Liability

This documentation describes the use of various hardware and software components in specific example applications. The components may represent products or parts of products from different manufacturers. The respective operating instructions from the manufacturers apply exclusively with regard to intended and safe use of the products. The manufacturers of the respective products are solely responsible for the contents of these instructions.

The sample applications described in this documentation represent concepts, that is, technically feasible applications. Whether these concepts can actually be implemented depends on various guidelines. For example, different versions of the hardware or software components can require different handling than that described here. Therefore, the descriptions contained in this documentation do not form the basis for assertion of a certain product characteristic.

Responsibility for safe use of a specific software or hardware configuration lies with the party that produces or operates the configuration. This also applies when one of the concepts described in this document was used for implementation of the configuration.

WAGO Kontakttechnik GmbH & Co. KG assumes no liability for the realization of these concepts.

Table of Contents

Table of Contents.....	6
1 Communication Module.....	7
1.1 M-Bus Master via M-Bus Module (753-659).....	7
2 Meters.....	9
2.1 Electricity meter.....	9
2.2 Heat meter.....	11
2.3 Multi Telegram Meter.....	13
2.4 Water meter.....	15
3 User Data.....	17
3.1 General Data Set.....	17
3.2 M-Bus Raw Data.....	19
4 Transmit Data.....	21
4.1 Transmitting M-Bus Data.....	21
5 M-Bus Module Tunnel Protocol (753-649).....	24
5.1 Requesting Module Statistics.....	24
5.2 Requesting Module Status.....	26
5.3 Tools.....	28
5.4 Measured Value Conversion in REAL.....	28
6 Data Structure.....	29
6.1 M-Bus Info.....	29
6.2 M-Bus Record.....	30
6.3 M-Bus Units.....	31
7 Appendix.....	32
7.1 Feedback (bFeedback).....	32

1 Communication Module

1.1 M-Bus Master via M-Bus Module (753-659)

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusMaster_753_649		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
Data type:	Comment:		
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
uiBaudrate	UINT	Baud rate of the M-Bus meter: 300, 2400, 9600 Default: 2400 (the common M-Bus baud rate)	
tTimeout	TIME	Timeout for M-Bus communication Default: t#3s	
xReset	BOOL	Rising edge: Master module is reset.	
Output parameter:			
Data type:	Comment:		
bFeedback	BYTE	Response byte (see appendix)	
Graphical illustration:			

Function description:

The **FbMbusMaster753_649** function block is used as the interface to the M-Bus Master module (753-649). All other function blocks communicate with the M-Bus Master module via this function block. This function block may be used only once per installed module.

The corresponding M-Bus module is specified at the “**bModule_753_649**” input. The value of this input cannot be changed at runtime.

The master module can be reinitialized by operating the “**xReset**” input. The output “**bFeedback**” outputs a numeric code with the response.

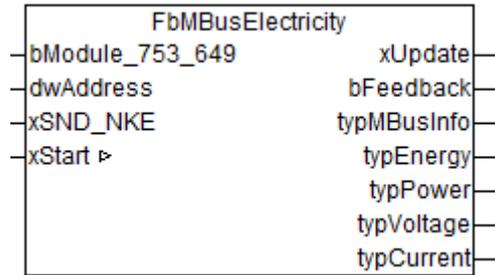
Note:

- The “FbMbusMaster753_649” function block must be called in the program sequence before all other M-Bus function blocks.
- All M-Bus function blocks that communicate with this master must be called up in the same program task.

2 Meters

2.1 Electricity meter

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusElectricity		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
Data type:	Comment:		
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
dwAddress	DWORD	M-Bus primary address (>255 sec. addr.)	
xSND_NKE	BOOL	M-Bus scaling command beforehand	
Input/output parameters:			
Data type:	Comment:		
xStart	BOOL	Variable to start the meter readout; automatically reset after readout is complete.	
Output parameter:			
Data type:	Comment:		
xUpdate	BOOL	New telegram available	
bFeedback	BYTE	Response byte (see appendix)	
typMbusInfo	typMbusInfo	Fixed meter data (header in the data telegram with ID, manufacturer, medium, etc.)	
typEnergy	typMbus Record	Meter reading for energy consumed (value, power of 10, unit)	
typPower	typMbus Record	Current heat output (value, power of 10, unit)	
typVoltage	typMbus Record	Voltage (value, power of 10, unit)	
typCurrent	typMbus Record	Current (value, power of 10, unit)	

Graphical illustration:**Function description:**

The function block is used to read and decode the data of an M-Bus electricity meter.

The “**bModule_753_649**” input defines the M-Bus module with which this function block must communicate.

The “**dwAddress**” input variable is preset with the primary address (<256) or the secondary address (ID) (>=256) of the meter.

If “**xSND_NKE**” is set, an M-Bus scaling command is sent to the meter before reading out the data. The command ensures in the case of meters with sequential telegrams, the first (most important) telegram is sent as a reply to the next query.

The “**xStart**” variable starts the meter readout. If the readout is successful, the function block resets the variable.

If the readout fails, the readout is started again. This operation repeats three times by default. The “**g_MBUS_MAX_REPEAT**” global variable can be used to assign how many times the operation repeats.

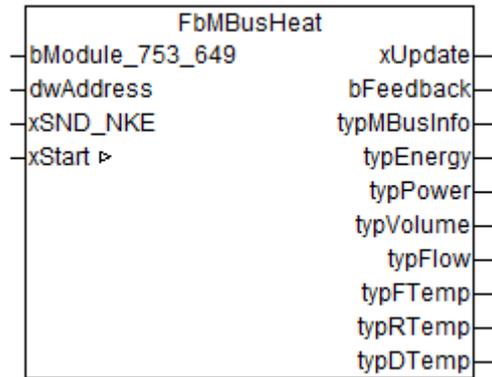
If a valid telegram is successfully queried, the “**xUpdate**” output is triggered. The output “**bFeedback**” outputs a numeric code with the response.

Notes:

To convert the meter readings to the required unit and a REAL type value, the user can use the function described further below. (See 5.4, page 28)

2.2 Heat meter

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusHeat		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
Data type:	Comment:		
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
dwAddress	DWORD	M-Bus primary address (>255 sec. addr.)	
xSND_NKE	BOOL	M-Bus scaling command beforehand	
Input/output parameters:			
Data type:	Comment:		
xStart	BOOL	Variable to start the meter readout; automatically reset after readout is complete.	
Output parameter:			
Data type:	Comment:		
xUpdate	BOOL	New telegram available	
bFeedback	BYTE	Response byte (see appendix)	
typMbusInfo	typMbusInfo	Fixed meter data (header in the data telegram with ID, manufacturer, medium, etc.)	
typEnergy	typMbus Record	Meter reading for energy consumed (value, power of 10, unit)	
typPower	typMbus Record	Current heat output (value, power of 10, unit)	
typVolume	typMbus Record	Metered water volume (value, power of 10, unit)	
typFlow	typMbus Record	Current flow rate (value, power of 10, unit)	
typFTemp	typMbus Record	Supply temperature (value, power of 10, unit)	
typRTemp	typMbus Record	Return air temperature (value, power of 10, unit)	
typDTemp	typMbus Record	Differential temperature (value, power of 10, unit)	

Graphical illustration:**Function description:**

The function block is used to read and decode the data of an M-Bus heat meter.

The “**bModule_753_649**” input defines the M-Bus module with which this function block must communicate.

The “**dwAddress**” input variable is preset with the primary address (<256) or the secondary address (ID) (>=256) of the meter.

If “**xSND_NKE**” is set, an M-Bus scaling command is sent to the meter before reading out the data. The command ensures in the case of meters with sequential telegrams, the first (most important) telegram is sent as a reply to the next query.

The “**xStart**” variable starts the meter readout. If the readout is successful, the function block resets the variable.

If the readout fails, the readout is started again. This operation repeats three times by default. The “**g_MBUS_MAX_REPEAT**” global variable can be used to assign how many times the operation repeats.

If a valid telegram is successfully queried, the “**xUpdate**” output is triggered. The output “**bFeedback**” outputs a numeric code with the response.

Notes:

To convert the meter readings to the required unit and a REAL type value, the user can use the function described further below. (See 5.4, page 28)

2.3 Multi Telegram Meter

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusMultiTel		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
Data type:	Comment:		
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller Default: 1 Area: 1-MBUS_MAX_MODULES	
dwAddress	DWORD	M-Bus primary address (>255 sec. addr.)	
xSND_NKE	BOOL	M-Bus scaling command beforehand	
Input/output parameters:			
Data type:	Comment:		
xStart	BOOL	Variable to start the meter readout; automatically reset after readout is complete.	
Output parameter:			
Data type:	Comment:		
xUpdate	BOOL	New telegram available	
bFeedback	BYTE	Response byte (see appendix)	
typMbusInfo	typMbusInfo	Fixed meter data (header in the data telegram with ID, manufacturer, medium, etc.)	
aMbusRecord	ARRAY [1..MBUS_MAX_DATARECORDS] OF typMbusRecord	Array with meter values (value, power of 10, unit)	
bNumberOfRecords	BYTE	Number of meter values	
Graphical illustration:			

Function description:

The function block is used to read and decode the data of an M-Bus multi telegram meter.

The “**bModule_753_649**” input defines the M-Bus module with which this function block must communicate.

The “**dwAddress**” input variable is preset with the primary address (<256) or the secondary address (ID) (>=256) of the meter.

If “**xSND_NKE**” is set, an M-Bus scaling command is sent to the meter before reading out the data. The command ensures in the case of meters with sequential telegrams, the first (most important) telegram is sent as a reply to the next query.

The “**xStart**” variable starts the meter readout. If the readout is successful, the function block resets the variable.

If the readout fails, the readout is started again. This operation repeats three times by default. The “**g_MBUS_MAX_REPEAT**” global variable can be used to assign how many times the operation repeats.

If a valid telegram is successfully queried, the “**xUpdate**” output is triggered. The output “**bFeedback**” outputs a numeric code with the response.

Notes:

To convert the meter readings to the required unit and a REAL type value, the user can use the function described further below. (See 5.4, page 28)

2.4 Water meter

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusWater		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
Data type:	Comment:		
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
dwAddress	DWORD	M-Bus primary address (>255 sec. addr.)	
xSND_NKE	BOOL	M-Bus scaling command beforehand	
Input/output parameters:			
Data type:	Comment:		
xStart	BOOL	Variable to start the meter readout. Automatically reset after readout is complete.	
Output parameter:			
Data type:	Comment:		
xUpdate	BOOL	New telegram available	
bFeedback	BYTE	Response byte (see appendix)	
typMbusInfo	typMbusInfo	Fixed meter data (header in the data telegram with ID, manufacturer, medium, etc.)	
typVolume	typMbus Record	Metered water volume (value, power of 10, unit)	
typFlow	typMbus Record	Current flow rate (value, power of 10, unit)	
Graphical illustration:			

Function description:

The function block is used to read and decode the data of an M-Bus water meter.

The “**bModule_753_649**” input defines the M-Bus module with which this function block must communicate.

The “**dwAddress**” input variable is preset with the primary address (<256) or the secondary address (ID) (>=256) of the meter.

If “**xSND_NKE**” is set, an M-Bus scaling command is sent to the meter before reading out the data. The command ensures in the case of meters with sequential telegrams, the first (most important) telegram is sent as a reply to the next query.

The “**xStart**” variable starts the meter readout. If the readout is successful, the function block resets the variable.

If the readout fails, the readout is started again. This operation repeats three times by default. The “**g_MBUS_MAX_REPEAT**” global variable can be used to assign how many times the operation repeats.

If a valid telegram is successfully queried, the “**xUpdate**” output is triggered. The output “**bFeedback**” outputs a numeric code with the response.

Notes:

To convert the meter readings to the required unit and a REAL type value, the user can use the function described further below. (See 5.4, page 28)

3 User Data

3.1 General Data Set

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusGeneral		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
	Data type:	Comment:	
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
dwAddress	DWORD	M-Bus primary address (>255 sec. addr.)	
xSND_NKE	BOOL	M-Bus scaling command beforehand	
Input/output parameters:			
	Data type:	Comment:	
xStart	BOOL	Variable to start the meter readout; automatically reset after readout is complete.	
Output parameter:			
	Data type:	Comment:	
xUpdate	BOOL	New telegram available	
bFeedback	BYTE	Response byte (see appendix)	
typMbusInfo	typMbusInfo	Fixed meter data (header in the data telegram with ID, manufacturer, medium, etc.)	
typMbusRecord	typMbusRecord	Meter reading (value, power of 10, unit)	
Graphical illustration:			
<pre> graph LR subgraph FbMbusGeneral direction TB bModule_753_649 dwAddress xSND_NKE xStart xUpdate bFeedback typMbusInfo typMbusRecord end bModule_753_649 --- FbMbusGeneral dwAddress --- FbMbusGeneral xSND_NKE --- FbMbusGeneral xStart --- FbMbusGeneral FbMbusGeneral --- xUpdate FbMbusGeneral --- bFeedback FbMbusGeneral --- typMbusInfo FbMbusGeneral --- typMbusRecord </pre>			

Function description:

The function block is used to read and decode the data of an M-Bus meter and returns exactly one meter reading.

The “**bModule_753_649**” input defines the M-Bus module with which this function block must communicate.

The “**dwAddress**” input variable is preset with the primary address (<256) or the secondary address (ID) (>=256) of the meter.

If “**xSND_NKE**” is set, an M-Bus scaling command is sent to the meter before reading out the data. The command ensures in the case of meters with sequential telegrams, the first (most important) telegram is sent as a reply to the next query.

The “**xStart**” variable starts the meter readout. If the readout is successful, the function block resets the variable.

If the readout fails, the readout is started again. This operation repeats three times by default. The “**g_MBUS_MAX_REPEAT**” global variable can be used to assign how many times the operation repeats.

If a valid telegram is successfully queried, the “**xUpdate**” output is triggered. The output “**bFeedback**” outputs a numeric code with the response.

Notes:

To convert the meter readings to the required unit and a REAL type value, the user can use the function described further below. (See 5.4, page 28)

3.2 M-Bus Raw Data

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusRawData		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
Data type:	Comment:		
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
dwAddress	DWORD	M-Bus primary address (>255 sec. addr.)	
xSND_NKE	BOOL	M-Bus scaling command beforehand	
Input/output parameters:			
Data type:	Comment:		
xStart	BOOL	Variable to start the meter readout; automatically reset after readout is complete.	
Output parameter:			
Data type:	Comment:		
xUpdate	BOOL	New telegram available	
bFeedback	BYTE	Response byte (see appendix)	
abData	ARRAY [0..MBUS_MAX_MBUSDATA] OF BYTE	Raw data	
uiLength	UINT	Length of the raw data	
Graphical illustration:			

Function description:

The function block is used to read and decode the data of an M-Bus meter and returns the raw data in an **“abData”** byte array. The length of the raw data is output at the **“uiLength”** output.

The **“bModule_753_649”** input defines the M-Bus module with which this function block must communicate.

The **“dwAddress”** input variable is preset with the primary address (<256) or the secondary address (ID) (>=256) of the meter.

If **“xSND_NKE”** is set, an M-Bus scaling command is sent to the meter before reading out the data. The command ensures in the case of meters with sequential telegrams, the first (most important) telegram is sent as a reply to the next query.

The **“xStart”** variable starts the meter readout. If the readout is successful, the function block resets the variable.

If the readout fails, the readout is started again. This operation repeats three times by default. The **“g_MBUS_MAX_REPEAT”** global variable can be used to assign how many times the operation repeats.

If a valid telegram is successfully queried, the **“xUpdate”** output is triggered. The output **“bFeedback”** outputs a numeric code with the response.

4 Transmit Data

4.1 Transmitting M-Bus Data

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusSendData		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
Data type:	Comment:		
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
dwAddress	DWORD	M-Bus primary address (>255 sec. addr.)	
bC_Field	BYTE	M-Bus C field Default: 16#53 (Transmit data)	
bCl_Field	BYTE	M-Bus CL field (16#53 for transmitting data)	
xSND_NKE	BOOL	M-Bus scaling command beforehand	
aTxPayload	ARRAY [0..MBUS_MAX_MBUSDATA] OF BYTE	M-Bus transmit data without frame (from Cl field)	
bTxLength	BYTE	Length of the transmit data	
Input/output parameters:			
Data type:	Comment:		
xSend	BOOL	Variable to start transmitting; automatically reset after transmission is complete.	
Output parameter:			
Data type:	Comment:		
bFeedback	BYTE	Response byte (see appendix)	

Graphical illustration:

Function description:

The function block is used to transmit data to an M-Bus meter.

The “*bModule_753_649*” input defines the M-Bus module with which this function block must communicate.

If “*xSND_NKE*” is set, an additional M-Bus scaling command is sent to the addressed meter before the actual data are sent.

The “*xSend*” variable starts the transmission of data to the M-Bus meter. This variable is automatically reset when transmission is complete.

If the transmission fails, the transmission is repeated. This operation repeats three times by default. The “*g_MBUS_MAX_REPEAT*” global variable can be used to assign how many times the operation repeats.

Telegram:

A data set to be sent appears as follows:

Start	Field	Field	Start	Field	Field	Field	User	CS	Stop
68h	L	L	68h	C	O	CI	Data	LSB	16h

The function block automatically adds a start character (68h), L field, checksum (CS) and stop character (16h).

C field:

The “*bC_Field*” field is the C field of the M-Bus telegram to be transmitted.

The C field has the value 16#53, for example, for “send data to slave” (or 16#73 when FCB is set).

The value of 16#52 (or 16#72 when FCB is set) is used to select a meter with the help of its 8-digit ID (secondary address) on the primary address 253.

A field:

The “*dwAddress*” input variable is preset with the primary address (<256) or the secondary address (ID) (>=256) of the meter.

The meter addressed by means of “*dwAddress*” acknowledges the received data record with the individual character 16#E5. If all M-Bus meters on the bus are to receive the data set, then the broadcast address 255 can be used without acknowledgement. In this case, the M-Bus Master Module automatically ensures that no telegrams are repeated and that there is no unnecessary waiting time due to timeouts.

CI field:

The “**bCI_Field**” field is the CI field of the M-Bus telegram to be transmitted.

The value of 16#51 signals to the addressed meter that data is to be sent to it from the master. *If the value is 16#50, the addressed meter executes the “Application Reset” command.*

User data:

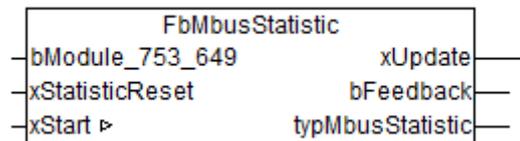
The M-Bus data to be transmitted is made available in the “**axTxPayload**” input array (User Data). The length of the data is specified at the “**bTxLength**” input.

The output “**bFeedback**” outputs a numeric code with the response.

5 M-Bus Module Tunnel Protocol (753-649)

5.1 Requesting Module Statistics

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusStatistic		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:	Data type:	Comment:	
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
xStatisticReset	BOOL	TRUE: Statistics reset requested	
Input/output parameters:	Data type:	Comment:	
xStart	BOOL	Variable to start the module request; automatically reset after request is complete.	
Output parameter:	Data type:	Comment:	
xUpdate	BOOL	New request successful	
bFeedback	BYTE	Response byte (see appendix)	
typMbusStatistic	typMbusStatistic	Requested values	
.wTxFrame	WORD	Number of M-Bus frames sent	
.wRxFrame	WORD	Number of fully received M-Bus frames	
.wRejectedTxFrame	WORD	Number of rejected M-Bus send requests because M-Bus not ready	
.dwSumRxFrame	DWORD	Number of total bytes received	
.dwSumFullRxFrame	DWORD	Number of bytes received that belong to the fully received M-Bus frames	
.wResponseTime	WORD	Number of M-Bus response timeouts Unsigned 16-bit integer value. Byte 1 is MS byte, byte 2 is LS byte.	
.wParityError	WORD	Number of M-Bus parity errors	
.wCollision	WORD	Number of M-Bus collisions	
.wOverload	WORD	Number of M-Bus overloads	
.wShortCircuit	WORD	Number of M-Bus short circuits	
.wOverheat	WORD	Number of internal terminal temperatures too high	
.wTimeoutFEC	WORD	Number of FEC status interface timeouts	

Graphical illustration:**Function description:**

The function block is used to request statistics from the M-Bus module (753-649).

The “**bModule_753_649**” input defines the M-Bus module with which this function block must communicate.

The “**xStart**” variable starts the module request. If the request is successful, the function block resets the variable.

If the “**xStatisticReset**” variable is set to TRUE before the request, the module statistics are reset.

If the request fails, the request is started again. This operation repeats three times by default. The “**g_MBUS_MAX_REPEAT**” global variable can be used to assign how many times the operation repeats.

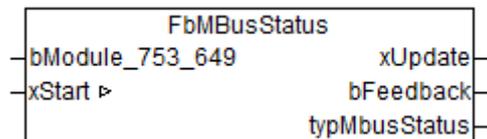
If the request is successful, the “**xUpdate**” output is triggered. The output “**bFeedback**” outputs a numeric code with the response.

5.2 Requesting Module Status

WAGO-I/O-PRO 32 Library Elements			
Category:	Building technology		
Name:	FbMbusStatus		
Type:	Function	Function block X	Program
Name of library:	MBUS_649_01.lib		
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib		
Applicable to:	See Release Note		
Input parameter:			
Data type:	Comment:		
bModule_753_649	BYTE	Specifies which M-Bus Multi-Master module is to be addressed at the controller. Default: 1 Area: 1-MBUS_MAX_MODULES	
Input/output parameters:			
Data type:	Comment:		
xStart	BOOL	Variable to start the module request; automatically reset after request is complete.	
Output parameter:			
Data type:	Comment:		
xUpdate	BOOL	New request successful	
bFeedback	BYTE	Response byte (see appendix)	
typMbusStatus	typMbusStatus	Requested values	
.bBaudrate	BYTE	Baud rate of the module interface: 16#00: 300 baud 16#01: 2400 baud 16#02: 9600 baud	
.xShortCircuit	BOOL	M-Bus short circuit	
.xCollision	BOOL	M-Bus collision	
.xOverheat	BOOL	Overtemperature in the module	
.xFailedFEC	BOOL	Failure field side	
.xInvalidVoltage	BOOL	Field supply voltage invalid	
.xOverload	BOOL	Overload at the M-Bus	
.xMbusReady	BOOL	M-Bus ready	
.xMbusVoltageOn	BOOL	M-Bus voltage on	
.bCableQuality	BYTE	Cable quality: Measurement of the capacity of the connected M-Bus cabling; no specification in the SI unit farad! Value range = 0 ... 255 %	
.rTemperature	REAL	Temperature in the module (raw value) Signed 16-bit integer raw value [-32768 ... 32767] of the module temperature; byte 1 is MS byte, byte 2 is LS byte. To determine the temperature, the raw value must be divided by 100. Example: $\vartheta = (16\text{-bit raw value}) / 100 \square [-327.68^\circ\text{c} \dots 327.67^\circ\text{c}]$	

.uiMarkVoltage	UINT	Mark operating voltage: Unsigned 16-bit integer measured value of the Mark operating voltage in Mv. Byte 1 is MS byte, byte 2 is LS byte. Example: 0x9168 □ 37224mV
.uiSpaceVoltage	UINT	Space operating voltage: Unsigned 16-bit integer measured value of the Space operating voltage in Mv. Byte 1 is MS byte, byte 2 is LS byte. Example: 0x5BF4 □ 23540mV
.uiPlusVoltageToGround	UINT	“M-Bus+” voltage based on Ground Unsigned 16-bit integer measured value of the “M-Bus+” voltage in Mv. Byte 1 is MS byte, byte 2 is LS byte. Example: 0x8E24 □ 36388mV
.uiMinusVoltageToGround	UINT	“M-Bus-” voltage based on Ground Unsigned 16-bit integer measured value of the “M-Bus-” voltage in Mv. Byte 1 is MS byte, byte 2 is LS byte. Example: 0x0094 □ 148mV
.bVersionFEC	BYTE	FEC version: Version number of the frontend controller firmware

Graphical illustration:



Function description:

The function block is used to request the status from the M-Bus module (753-649).

The “**bModule_753_649**” input defines the M-Bus module with which this function block must communicate.

The “**xStart**” variable starts the module request. If the request is successful, the function block resets the variable.

If the request fails, the request is started again. This operation repeats three times by default. The “**g_MBUS_MAX_REPEAT**” global variable can be used to assign how many times the operation repeats.

If the request is successful, the “**xUpdate**” output is triggered. The output “**bFeedback**” outputs a numeric code with the response.

5.3 Tools

5.4 Measured Value Conversion in REAL

WAGO-I/O-PRO 32 Library Elements		
Category:	Building technology	
Name:	FuUnitConverter	
Type:	Function X	Function block Program
Name of library:	MBUS_649_01.lib	
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib	
Applicable to:	See Release Note	
Input parameter:	Data type:	Comment:
typMbus Record	typMbus Record	M-Bus data records (value, power of 10, unit)
eUnit	eMbusUnit	Target unit
Output parameter:	Data type:	Comment:
	REAL	Meter reading for target unit
Graphical illustration:		
Function description:		
The function is used to convert an M-Bus “ <i>typMbusRecord</i> ” data set to a required “ <i>eUnit</i> ” target unit and a meter value of the REAL type.		

6 Data Structure

6.1 M-Bus Info

WAGO-I/O-PRO 32 Library Elements	
Category:	Building technology
Name:	typMbusInfo
Type:	Data type <input checked="" type="checkbox"/> Enumeration <input type="checkbox"/>
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib
Applicable to:	See Release Note
Declaration:	
<pre> TYPE typMbusInfo: STRUCT bPAdr : BYTE; sID : STRING(8); sMAN : STRING(3); sMED : STRING(14); bMGen : BYTE; bMStatus : BYTE; bMStatus : BYTE; bAllRecords : BYTE; bGoodRecords : BYTE; END_STRUCT END_TYPE </pre>	

6.2 M-Bus Record

WAGO-I/O-PRO 32 Library Elements		
Category:	Building technology	
Name:	typMbusRecord	
Type:	Data type <input checked="" type="checkbox"/>	Enumeration <input type="checkbox"/>
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib	
Applicable to:	See Release Note	
Declaration:		
<pre> TYPE typMbusRecord: STRUCT sValue : STRING[21]; sPof10 : STRING[3]; sUnit : STRING[7]; bSubdevice : BYTE; bTariff : BYTE; bStorage : BYTE; bFunctionNo : BYTE; sDescriptor : STRING[23]; eEnum_Unit : eMbusUnit; END_STRUCT END_TYPE </pre>		

6.3 M-Bus Units

WAGO-I/O-PRO 32 Library Elements	
Category:	Building technology
Name:	eMBusUnit
Type:	Data type <input type="checkbox"/> Enumeration <input checked="" type="checkbox"/>
Libraries used:	WagoLibMBX_01.lib WagoLibKBUS.lib
Applicable to:	See Release Note
Declaration:	
<pre> TYPE eMBusUnit : (MBus_miW, MBus_W, MBus_kW, MBus_MW, MBus_GW, MBus_miJps, MBus_Jps, MBus_kJps, MBus_MJps, MBus_GJps, MBus_miJpmin, MBus_Jpmin, MBus_kJpmin, MBus_MJpmin, MBus_GJpmin, MBus_miJph, MBus_Jph, MBus_kJph, MBus_MJph, MBus_GJph, MBus_miWs, MBus_Ws, MBus_kWs, MBus_MWs, MBus_GWs, MBus_miJ, MBus_J, MBus_kJ, MBus_MJ, MBus_GJ, MBus_miWmin, MBus_Wmin, MBus_kWmin, MBus_MWmin, MBus_GWmin, MBus_miWh, MBus_Wh, MBus_kWh, MBus_MWh, MBus_GWh, MBus_mil, MBus_l, MBus_m3, MBus_milps, MBus_lps, MBus_m3ps, MBus_milpmin, MBus_lpmin, MBus_m3pmin, MBus_milph, MBus_lph, MBus_m3ph, MBus_g, MBus_kg, MBus_gps, MBus_kgps, MBus_gpmin, MBus_kgpmin, MBus_gph, MBus_kgph, MBus_mibar, MBus_bar, MBus_kbar, MBus_miC, MBus_C, MBus_miK, MBus_K, MBus_HCA, Mbus_none, MBus_V, MBus_miA, MBus_A, MBus_pRH, MBus_Hz); END_TYPE </pre>	

7 Appendix

7.1 Feedback (bFeedback)

Table 1: Feedback

Feedback	ID Number (hex)
MBUS_OK	16#00
MBUS_INFO_APP_BUSY	16#01
MBUS_INFO_APP_ACTIVE_SEND	16#02
MBUS_INFO_APP_WAITING	16#03
MBUS_ERROR_NULL	16#FF
MBUS_ERROR_KBUS	16#B0
MBUS_ERROR_MBX2ERROR	16#B1
MBUS_ERROR_APP_INVALIDPARAM	16#81
MBUS_ERROR_APP_TIMEOUT	16#82
MBUS_ERROR_APP_CRC	16#83
MBUS_ERROR_APP_FRAME	16#84
MBUS_ERROR_APP_UNANALYSABLE	16#85
MBUS_ERROR_APP_INVALID_TELEGRAM	16#86
MBUS_ERROR_MSG_RSP_TIMEOUT	16#E1
MBUS_ERROR_MSG_PARITY	16#E2
MBUS_ERROR_MSG_COLLISION	16#E3
MBUS_ERROR_MSG_REJECTED	16#E4
MBUS_ERROR_RSP_SHORTCIRCUIT	16#C1
MBUS_ERROR_RSP_COLLISION	16#C2
MBUS_ERROR_RSP_OVERHEAT	16#C3
MBUS_ERROR_RSP_FEC	16#C4
MBUS_ERROR_RSP_FVOLT	16#C5
MBUS_ERROR_RSP_OVERLOAD	16#C6
MBUS_ERROR_RSP_NOTREADY	16#C7
MBUS_ERROR_RSP_BUSVOLTOFF	16#C8

WE! INNOVATE!

WAGO Kontakttechnik GmbH & Co. KG
PO box 2880 • D-32385 Minden
Hansastraße 27 • D-32423 Minden
Phone: +49 (0) 571/8 87 – 0
Fax: +49 (0) 571/8 87 – 1 69
Email: info@wago.com
Web: <http://www.wago.com>

